

# OPERATION FOR SOFTWARE INSTALL

SUPPORTS THE FOLLOWING OPERATING SYSTEM:

- WINDOWS 98SE
- WINDOWS ME
- WINDOWS 2000
- WINDOWS XP (32 & 64 BIT)
- WINDOWS SERVER 2003 (32 & 64 BIT)
- WINDOWS SERVER 2008 / 2008 (32 & 64 BIT)
- WINDOWS VISTA (32 & 64 BIT)
- WINDOWS 7 (32 & 64 BIT)

## Step-By-Step:


1. Install PC-LINK software.



2. Install USB driver.




3. Restart PC.
4. Put the USB cable to the PC USB port.
5. PC detected the COM.

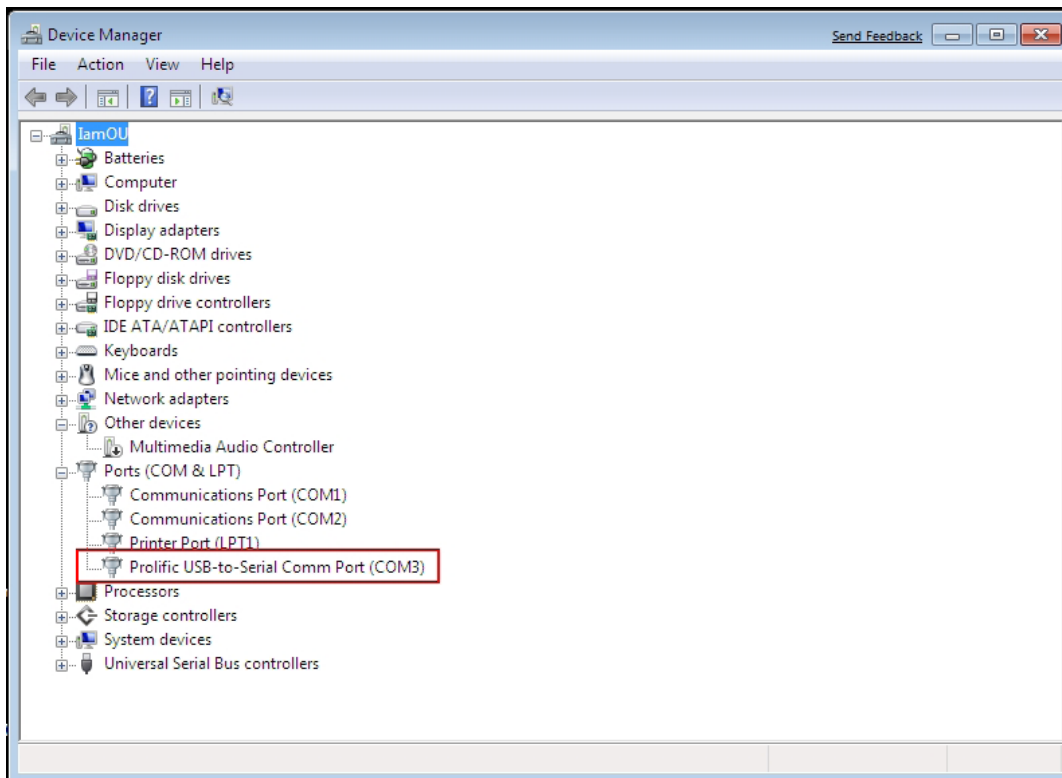


6. Run the PC-LINK software.
7. Connect with USB cable and DMM(meter).
8. Turn on the DMM and act the PC-LINK function.
9. Press the start button in the PC-LINK software.

Notice:

- Login with Administrators right in PC system.

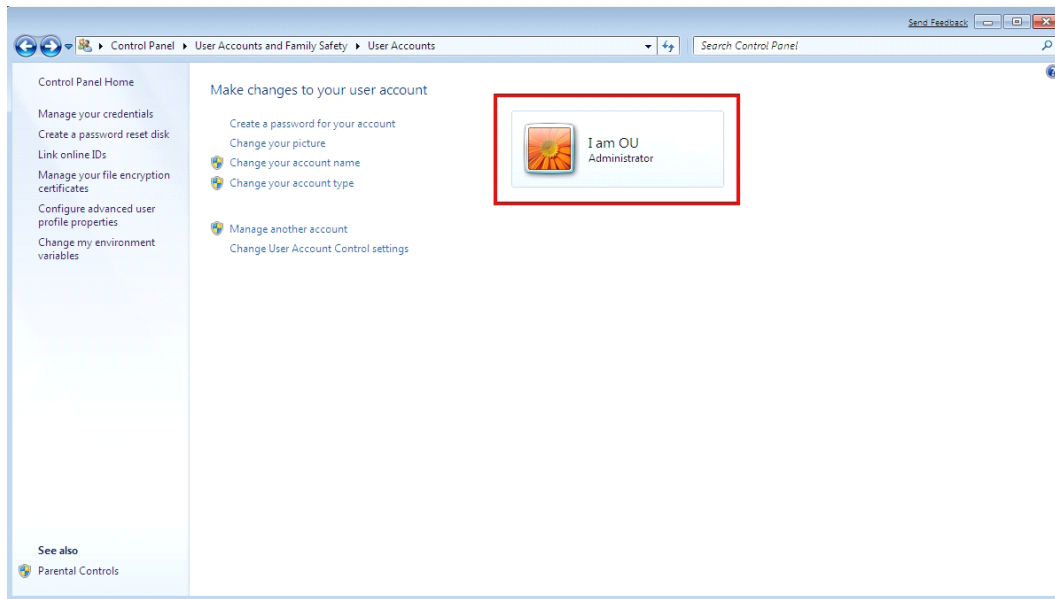

- If in the Windows Vista/Windows 7 system, must be disable UAC(Use Account Control) function.

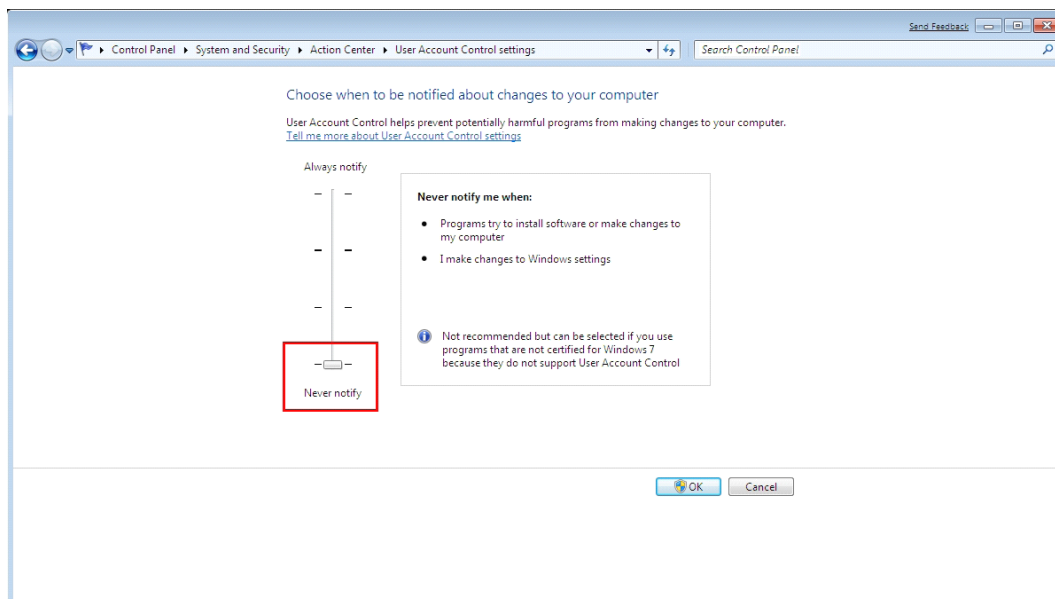

- Make sure the USB cable is have a good connection with the DMM.